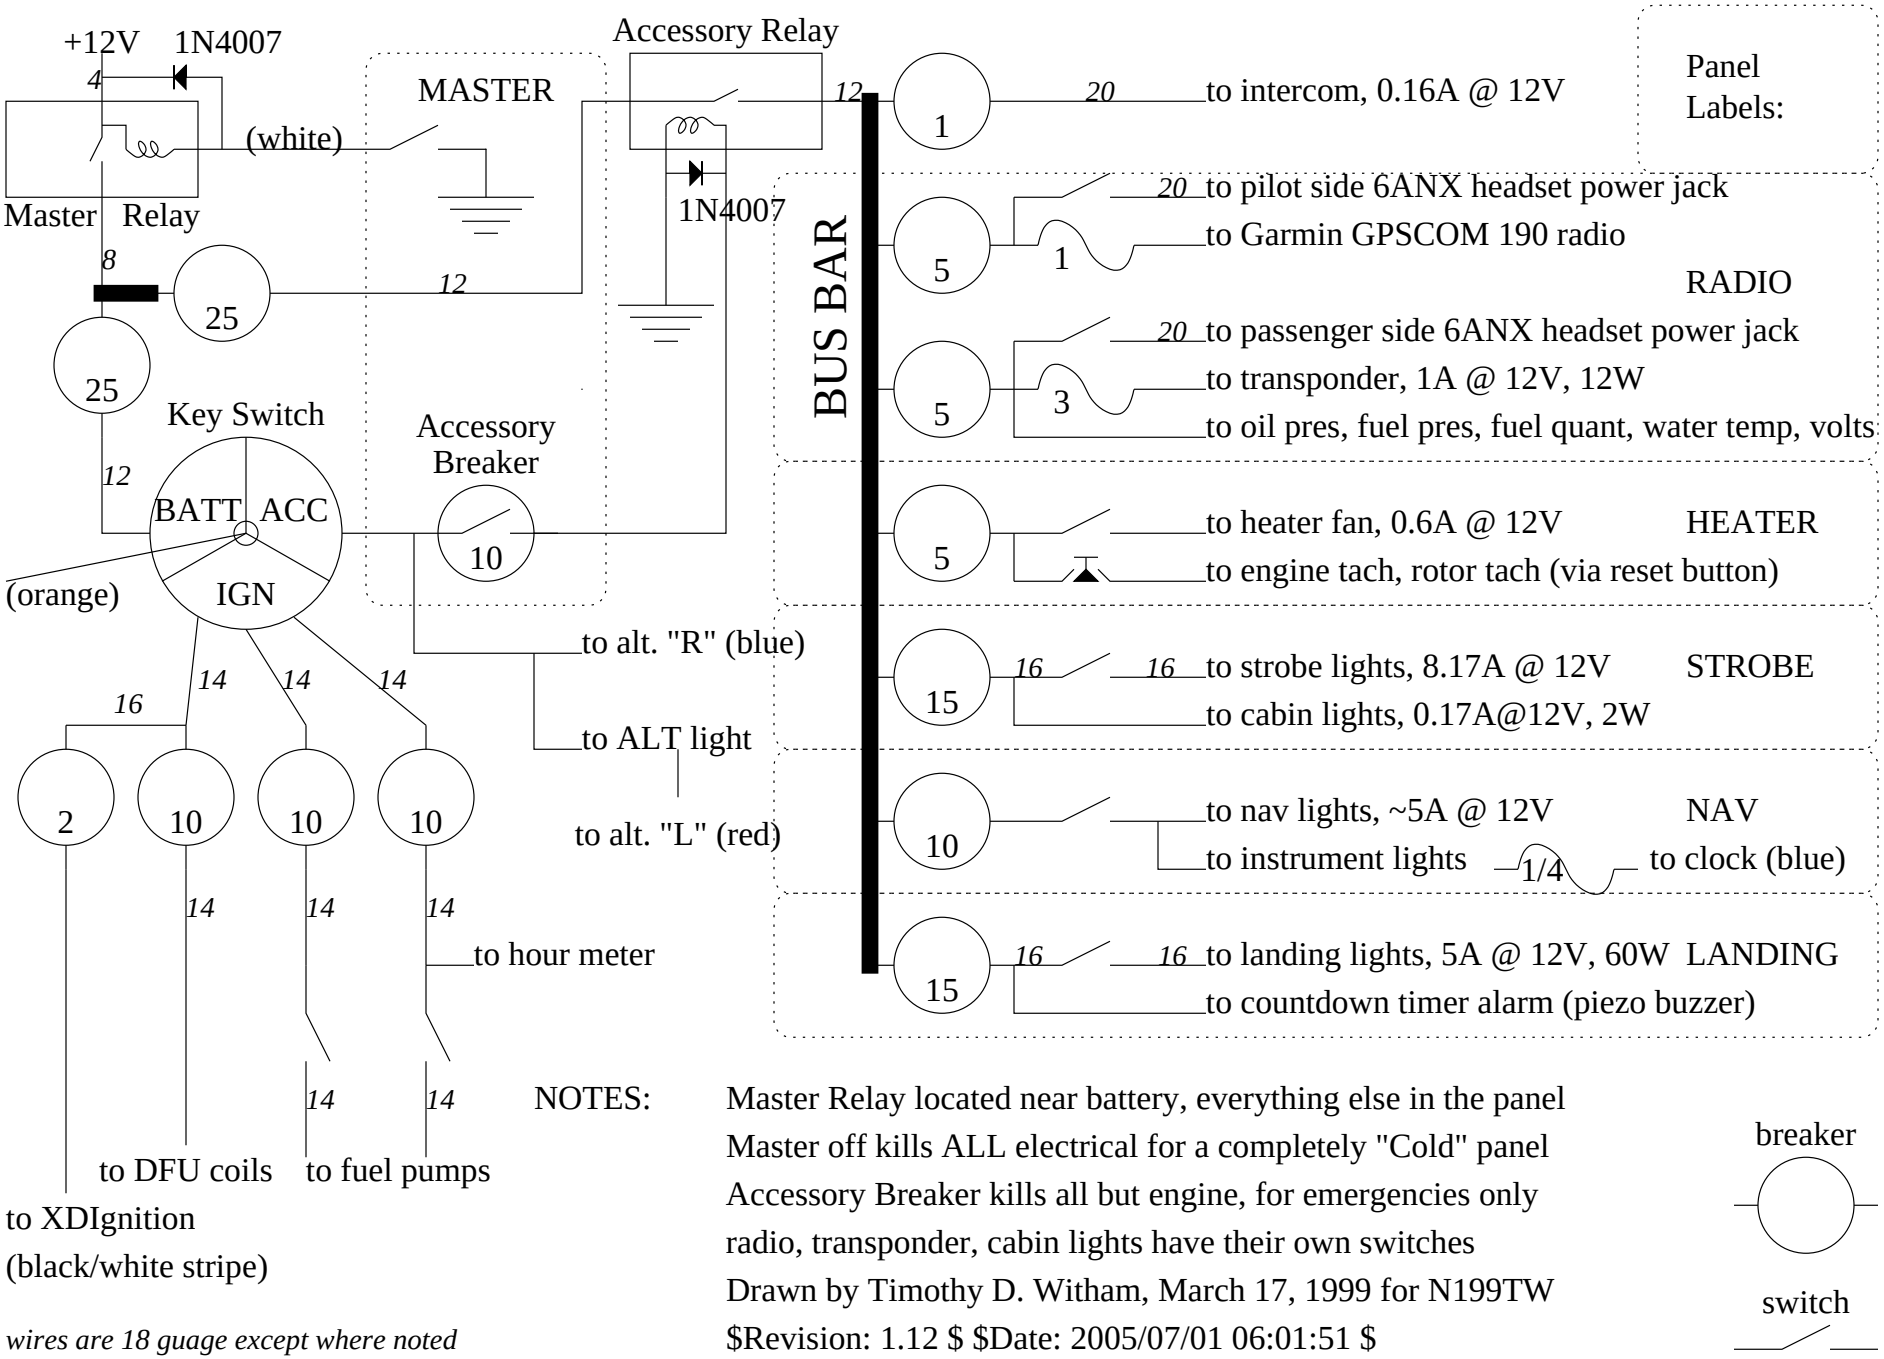

NOTES:

Master Relay located near battery, everything else in the panel
Master off kills ALL electrical for a completely "Cold" panel
Accessory Breaker kills all but engine, for emergencies only
radio, transponder, cabin lights have their own switches
Drawn by Timothy D. Witham, March 17, 1999 for N199TW
$Revision: 1.12 $ $Date: 2005/07/01 06:01:51 $

wires are 18 guage except where noted